

user manual

ENDURA T18



ENDURA T18

Congratulations on your purchase of this Innokin ENDURA T18 Complete Vaporizer System. For the very best possible vaping experience please carefully read, and follow this user manual.

First, please check & verify that this ENDURA T18 Personal Vaporizer is an authentic Innokin Technology device. To verify:

- 1) Locate the label on the packaging and scratch the silver stripe to reveal your ENDURA T18 Unique Authorization number.
- 2) Visit the Official Innokin Technology website at www.innokin.com.
- 3) Enter the Unique Authentication number in the Authentication field.
- 4) Verify your Endura T18 Personal Vaporizer is authentic.

If you have any questions or suggestions we would like to invite you to please write to us at support@innokin.com.

For the latest information, contests, giveaways and be part of a great and growing community please visit:

The Innokin Facebook page <https://www.facebook.com/Innokin.Technology>

Innokin subreddit: <http://www.reddit.com/r/innokin>

Innokin Instagram: <https://instagram.com/innokintechnology>

Innokin ECF subforum: <https://www.e-cigarette-forum.com/forum/forums/innokin-technology.914/>

Pinterest: https://www.pinterest.com/innokin_tech

Visit www.innokin.com today to find your local Authorized Innokin Vendor and for daily updated information about new products and vaping news from around the world.

Thank you very much to Jimmith for the amazing Endura Visual Quick Start Guide! Visit (<http://iimmith.blogspot.com/>) for reviews, visual learning guides & more!

WARNING:

Please read this section carefully to ensure you receive maximum benefits from your ENDURA T18 Personal Vaporizer and enjoy vaping with it in the most safe and effective ways possible.

 
1. This Personal Vaporizer may be used with e-liquids that contain nicotine. **If questions or concerns regarding your e-liquid arise, please check with your e-liquid provider.** This product is only intended for use by adults of legal smoking age (18+) and should not be used by children, women who are pregnant or breastfeeding, or persons with or at risk of heart disease, high blood pressure, diabetes or taking medicine for depression or asthma, or who otherwise may be sensitive to nicotine. Nicotine is addictive and habit forming, and can be toxic by inhalation, in contact with the skin or eyes, or if swallowed. Ingestion of the non-vaporized concentrated e-liquid ingredients can be poisonous. Keep away from children and pets.
2. This Personal Vaporizer may be used with e-liquids that contain nicotine,

a chemical known to the State of California to cause birth defects or other reproductive harm. **Please check with your e-liquid provider. (For products sold in California.)**

3. This Personal Vaporizer is only designed to be used with high quality e-liquid. **Please check with your e-liquid provider.** This device is not intended for use with loose tobacco leaf or herbal substances.
4. This Personal Vaporizer has not been evaluated by the Food and Drug Administration and is not intended to treat, mitigate, prevent or cure any disease or condition. This product is not intended for use as a smoking cessation device.
5. The clearomizer **must** be stored out of the reach of children and pets. All empty clearomizers must also be disposed of properly and out the reach of children and pets.
6. This Personal Vaporizer includes small parts such as the mouth piece. Always keep any small parts out of reach of children and pets to prevent swallowing or other harm.


7. Do not misuse, mishandle or store your ENDURA T18 Personal Vaporizer improperly. Even though it is made of high quality stainless steel it may become damaged when dropped or otherwise mishandled.
8. Do not attempt to repair the unit by yourself as damage or personal injury may occur.
9. In order to guarantee the normal functioning of your ENDURA T18 Personal Vaporizer, and maximize vaping pleasure, we strongly advise that you charge the battery when the power level drops below 10 percent.
10. In order to prolong the operation of your ENDURA T18 Personal Vaporizer, please do not place or store this ENDURA T18 Personal Vaporizer in excessively hot or cold environments.
11. Obey local laws or regulations regarding Electronic Cigarettes when vaping. If you are in an area where there are any bans or potential dangers, please do not use your ENDURA T18 Personal Vaporizer.
12. Your ENDURA T18 Personal Vaporizer is not waterproof. Keep it dry at all times.

13. Do not allow any liquids or ejuice to enter the device through the top threading or the USB ports. If any liquids enter the device, or come into contact with the PCB, please discontinue using or charging the device and contact your local Authorized Innokin Vendor immediately.
14. Keep your ENDURA T18 Personal Vaporizer away from sources of excessive heat as damages may occur.
15. Do not drop, throw, or mishandle your ENDURA T18 Personal Vaporizer as the outer shell or inner components may become damaged.
16. Innokin Technology is not responsible for battery and charger explosions, or malfunctions, due to the use of a low-quality charger. Only use the original ENDURA T18 Personal Vaporizer starter kit charger to charge your ENDURA T18, We strongly recommend that you always use a high quality 5V 1A USB wall charger (CE/UL Certified). The ENDURA T18 is not designed for use with a car charger, The ENDURA T18 does not come included with a car charger.
17. Innokin Technology is not responsible for any clearomizer or battery damage due to the use of low quality eLiquid or dry herb.

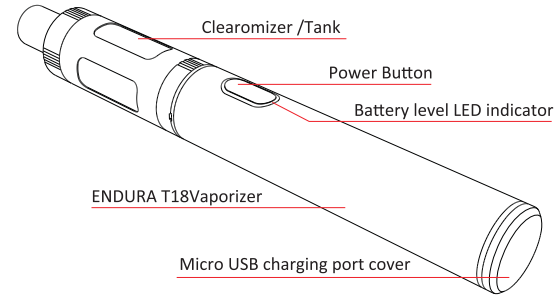

Charging the Endura battery:

 To charge your ENDURA T18 battery connect a properly powered Microusb cable to the 'input' port on the ENDURA T18 Micro USB port.

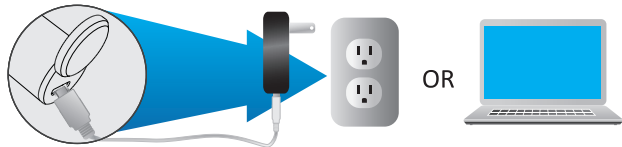

When Charging the device:

The ENDURA T18 battery charging status is via green, yellow and red LED.

Green = Almost fully Charged.

When the ENDURA T18 battery is fully recharged the LED light will power off.

Yellow = Half Power.

Red = Low Power. Charge the ENDURA T18 battery .

IMPORTANT: Please read and adhere to the following warnings when charging your device.

Only charge Innokin devices with a high quality CE/UL Certified 5V/1A wall charger.

Never charge a battery that has been damaged or dropped.

Never plug a charger into a non-approved mains power transformer.

Do not overcharge. Remove the battery from the charger when complete.

Never leave a charging battery unattended.

Only use the included high quality charging cable.

Wall Adapters should be CE / UL/ FCC certified, high quality and authentic.

Do not charge your vaporizer with your car.

If there are any issues with the device please contact your Authorized Innokin vendor immediately.

The ENDURA T18 Personal Vaporizer Battery Level Indicator:

 
The ENDURA T18 battery capacity is displayed via a green, yellow and red LED.

When using the device:

Green = Almost fully Charged. Battery voltage is higher than 3.75V.

Yellow = Half Power. Battery voltage is around 3.6V-3.75V

Red = Low Power. Battery voltage is lower than 3.6V. Charge the ENDURA T18.

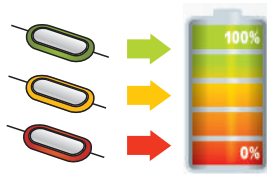

How to refill the Prism T18 Clearomizer/Tank:

- 1) Carefully unscrew the top cap from the Clearomizer/Tank.
- 2) Add eLiquid against the inside wall of the Clearomizer/Tank.

IMPORTANT:

Do not add eliquid to the airflow hole.

Do not over-tighten.

Important:

After refill Please wait 5 minutes before vaping.

 
eLiquid CAUTION:

Take care when filling the tank and do not overfill.

In case of eLiquid contact with skin, wash immediately and thoroughly with soap and water.

In case of eLiquid contact with eyes, rinse immediately and thoroughly with water and seek full medical advice immediately.

In case of an accident, or if you feel unwell, seek full medical advice.

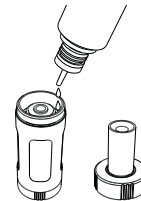


Replace a coil

- 1) Hold the Clearomizer/Tank with the threading up.
- 2) Unscrew the bottom Metal cap of the T18 Clearomizer/Tank
- 3) Hold the coil and gently pull to remove.
- 4) Carefully and safely dispose of the used coil. Keep away from children and pets.

CAUTION:

Make sure there is no eLiquid in the Clearomizer/Tank before you pull out the coil

 - 5) Properly align the flat sides of the new coil.
- 6) Push to fully insert the new coil firmly into Clearomizer/Tank.
- 7) Ensure that the coil is completely inserted.
- 8) Carefully and firmly tighten the metal cap.

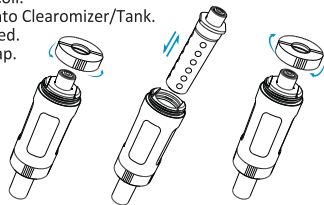

Only use the original ENDURA T18 Personal Vaporizer starter kit Clearomizer/Tank.

Innokin Technology is not responsible for any clearomizer/tank or battery damage due to the use of low quality eLiquid or dry herb.

Innokin Technology is not responsible for battery explosions, or malfunctions, due to the use of a low-quality or damaged Clearomizer/Tank.

WHEN IS IT TIME TO CHANGE THE CLEAROMIZER COIL?

All coils will need to be replaced after a certain amount of use. The time between coil replacements will vary by vaper according to the eLiquid used and personal vaping habits. You will know when the atomizer coil should be replaced when you begin experiencing less performance and taste from your clearomizer.

When a new clearomizer coil is used, large vapor clouds and robust flavors will be produced from your e-liquid. The first sign that your coil needs to be replaced is that there will be less vapor production. The second indication that the atomizer coil needs to be replaced is that flavors will become less tasty, and may begin to have a burnt taste.

This burnt taste will become more and more apparent as the coil continues to wear out.

We recommend that you change the coil at the very first sign of burnt taste and decreased clouds.

POWERING THE ENDURA ON/OFF:

Press the power button three times to turn on the ENDURA T18 Personal Vaporizer. Once the ENDURA T18 Personal Vaporizer is powered on, hold down the power button to activate the clearomizer/tank. When the ENDURA T18 Personal Vaporizer is not in use, press the power button three times in succession to power off the ENDURA T18 Personal Vaporizer.

IMPORTANT: Always power off the ENDURA T18 Personal Vaporizer when it is not being used, or when it is going to be stored in a pocket, bag or purse.

SAFETY:**15 second cutoff:**

If the button is held for 15 seconds or longer the ENDURA T18 Personal Vaporizer LED lights will flash and then stop firing until the button is released and pressed again.

Low Voltage Warning:

The Red LED will blink when the battery capacity is lower than 3.3V and the ENDURA T18 Personal Vaporizer will automatically power off.

Short Circuit/Atomizer Protection:

Short Circuit/Atomizer Protection protects the ENDURA T18 Personal Vaporizer against shorted atomizers and will stop the unit from functioning in unsafe conditions.

The ENDURA T18 Personal Vaporizer features automatic real-time atomizer Ohms detection. If the resistance of the atomizer is lower than 1.2 Ohm, the LED will stay on 5 seconds and the ENDURA T18 Personal Vaporizer will not power on.

Over-Discharge Protection:

The ENDURA T18 Personal Vaporizer monitors the battery voltage and will automatically power off when the battery is over discharged.

Over-charge Protection:

4.5~6.0V, charging current 420mA.

Overheat Protection:

The red LED will blink 3 times if the PCB is overheated.

'Vape while charging' Technology

The ENDURA T18 Personal Vaporizer is recharged with a Micro USB cable. When plugged into a power source the ENDURA T18 Personal Vaporizer can also be vaped and charged at the same time with Innokin Technology's 'Vape while charging' pass-through technology.

While Vaping while charging and using the ENDURA T18 the LED will display:

Green = Almost fully Charged. Battery voltage is higher than 3.75V.

Yellow = Half Power. Battery voltage is around 3.6V-3.75V

Red = Low Power. Battery voltage is lower than 3.6V. Charge the ENDURA T18.

PLEASE NOTE:

Low power: The Red LED will blink for eight seconds when battery capacity is lower than 3.3V and the ENDURA T18 Personal Vaporizer battery will automatically power off.

When the ENDURA T18 Personal Vaporizer battery is fully charged the LED will light fully Green.

Technical Specifications

Battery: 1000mAh

Standby current: 10 uA max

Maximum output Wattage: 14W

Maximum output Current: 3.5A

Maximum output Voltage: 5.5V

Clearomizer Resistance: 1.2 ~ 2.5Ohm

Charging: Micro USB DC5V/1A

WARRANTY INFORMATION

Innokin Technology provides a 30 day ENDURA T18 after sales service warranty to all of our authorized vendors.

Please consult the official Innokin website (www.innokin.com) or your Authorized Innokin Technology Vendor for more information and terms of service.

The proof of purchase is needed for the 30 Day ENDURA Limited Warranty.